

IMPORTANT - PLEASE READ BEFORE INSTALLATION

Twinflex I/O Module Compatibility

The Twinflex I/O Module is compatible with both the Twinflex V3 panel and the Twinflex Pro panel.

Please note the following:

- ***When the output facility on the I/O module is used with a Twinflex V3 panel, the outputs will come on when the sounders are on i.e. if the sound alarms button is pressed. When used with the Twinflex Pro panel, the outputs will only come on in a fire condition.***
- ***When the output facility on the I/O module is used with a V1.17 or earlier Twinflex Pro panel, if the output is activated and a device fault then occurs on the same zone as the output, the output will de-energise. This effect will not occur if the output is on the same zone as the one that is in fire.***

If you require the output to remain on constantly in the event of a device fault, V1.18 or later of the Twinflex Pro panel is required.

26-1139 Issue 1

IMPORTANT - PLEASE READ BEFORE INSTALLATION

Twinflex I/O Module Compatibility

The Twinflex I/O Module is compatible with both the Twinflex V3 panel and the Twinflex Pro panel.

Please note the following:

- ***When the output facility on the I/O module is used with a Twinflex V3 panel, the outputs will come on when the sounders are on i.e. if the sound alarms button is pressed. When used with the Twinflex Pro panel, the outputs will only come on in a fire condition.***
- ***When the output facility on the I/O module is used with a V1.17 or earlier Twinflex Pro panel, if the output is activated and a device fault then occurs on the same zone as the output, the output will de-energise. This effect will not occur if the output is on the same zone as the one that is in fire.***

If you require the output to remain on constantly in the event of a device fault, V1.18 or later of the Twinflex Pro panel is required.

26-1139 Issue 1