

Switching off routine service timer

1. Enter the engineering menu in the panel using the code **3647** Press enter

```
01/08/13  10:26  ENGR
1.  VIEW CURRENT EVENT
2.  TEST MODES
Press Enter Key
```

2. In the menu scroll down to option **9. PANEL DETAILS** Press enter

```
01/08/13  10:26  ENGR
9. PANEL DETAILS
10. PANEL I/O
Press Enter Key
```

3. Scroll down to option **5. TIMERS** Press enter

```
01/08/13  10:26  ENGR
5. TIMERS
1. BUZZER
Press Enter Key
```

4. Scroll down to option **2. SERVICE TIMES** Press enter

```
01/08/13  10:26  ENGR
2. SERVICE TIMER
1. WEEKLY TEST TIMER
Press Enter Key
```

5. Locate the write enable switch inside the top left of the panel and switch to the ON position



6. In the service timer options set the number of weeks to **00** and press enter to switch off service timer

```
01/08/13  10:26  ENGR
SERVICE TIMER
TIME= 00 ( 0-99 WEEKS )
Press Enter Key
```

7. Press reset system on the front of the panel



8. Switch off write enable switch

9. Press ESC to exit to main menu

