


326-0023 Sita Sounder/Strobe with Deep Base

General Description

The Sita Sounder/Strobe unit allows for audible and visual indication when the system enters an alarm condition. This is an addressable unit that attaches to the loop. Digital communication technology to the control panel is implemented allowing for accurate data transfer at high transmission speeds. This device is only compatible with the Sita 200+, Duonet and Quadnet ranges of control panels.

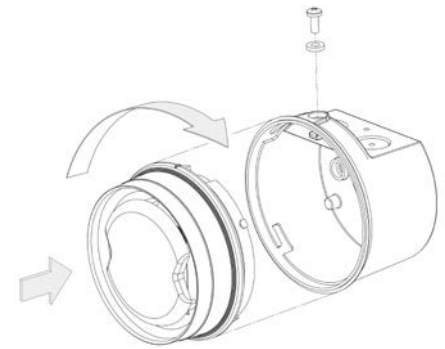

Before Installation

The Sounder/Strobe must be installed in compliance with the control panel installation manual. The installation must also meet the requirements of any local authority. For maximum performance the device should be installed in compliance with BS 5839. Pt1 : 2002 + A2 : 2008.

Spacing

Fike recommends spacing of sounders/strobes in accordance with BS 5839. For more specific information regarding sounder spacing, placement and special applications please refer to BS 5839 Pt1 : 2002 + A2 : 2008.

Device Installation

The base moulding should be positioned so that access to the locking screw is concealed from general view to lessen the possibility of unauthorised removal of the device.

Drill the cable entry region(s) in base moulding as required.


Drill out the desired mounting holes through hole / slot guides as required. Affix the base moulding to a flat surface using a minimum of 2 screws.

All wiring must be installed in compliance with the recommendations laid out by BS 5839 as well as any special recommendations documented in the control panel installation manual. **The cabling used should be of a 2-core 1.5mm² screened, fire resistant type, with the following characteristics:**

| | |
|---|------------|
| Max Capacitance Core to Screen..... | 180pF / m |
| Max Capacitance Core to Core..... | 100pF / m |
| Max Inductance..... | 1.0mH / km |
| Max Resistance Two Core Screened 1.5mm ² | 12.1Ω / km |

It is to be wired in the form of a screened 2-core loop returning to the control panel. The use of spurs on this system is not permitted. Cables may be terminated into the connector, as shown below. Care should be taken when terminating devices to ensure all cables are correctly sleeved and connections are secure. Improper connections will prevent a system from responding properly in the event of a fire.

| Terminal | Description |
|----------|--------------|
| L1 | Loop +ve IN |
| 0V | Loop -ve IN |
| SCRN | Screen IN |
| SCRN | Screen OUT |
| 0V | Loop -ve OUT |
| L2 | Loop +ve OUT |

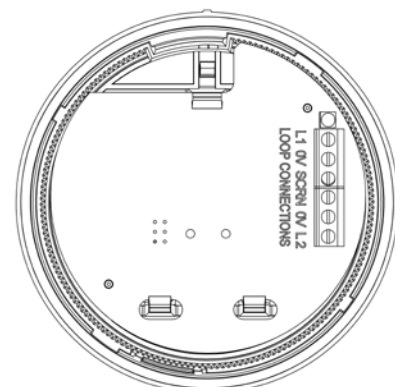

The Loop +ve (positive) IN and the Loop +ve (positive) OUT connections are split within the module. For cable continuity readings at the commissioning stage they must be temporarily removed and connected through. Please remember that all high voltage testing must be carried out before the installation of the electronics, otherwise the electronics will be damaged. Please also note that the SCRN terminal should only be connected to the loop screen and NOT the building earth.

Once all testing has been carried out on the cabling and **continuity & insulation** has been proven, the Sounder/Strobe unit can be assembled.

NOTE: Before installing the Sounder/Strobe remember to note the serial number of the device (located on the rear of the unit) on to your drawings or configuration sheets to enable you to prove its location later. The address allocation for the device is carried out automatically by the control panel whilst in initialisation mode, so addresses do not need to be set manually. See the system Installation and Operating Instructions for further details.

Tamper Resistance

The unit incorporates a locking screw which helps prevent unauthorised removal from the base. To fit, gently insert the device positioned so that the alignment mark on the rim is rotated slightly anti-clockwise relative to the alignment mark on the base. Rotate clockwise until the device drops in and the alignment marks meet. Tighten the locking screw, but do not over tighten.

To remove the device, unscrew the retaining screw. The device should then be turned anti-clockwise allowing it to be removed from the base.

Device Settings

The sounder modes may be configured using the relevant panel software configuration package (OSP).

| | Type | Description |
|-----------------------|-------|--|
| Sound Pattern: | SP0 | Sounder off |
| | SP1 | Single tone, 970 Hz continuous |
| | SP2 | Pulsed UK alert signal, 970 Hz 1s on, 1s off |
| | SP3 | Dual tone UK evacuate signal, 970 Hz 0.25s, 800 Hz 0.25s |
| | SP4 | This sound pattern is not supported in this product |
| | SP5 | Slow whoop up, 500 to 1200 Hz over 3s, 0.5s off |
| | SP6 | Sweep down, 1200 Hz to 500 Hz over 1s |
| | SP7 | Dual tone French warble, 550 Hz 0.1s, 440 Hz 400ms |
| Sound Volume: | L/M/H | Low, medium and high settings are available |

See the Engineering & Commissioning Manual for your control panel (Sita, Duonet or Quadnet) for further details of how to program the above.

Beacon Operation

The unit includes a Visual Indication Beacon. This consists of a number of high output LEDs.

The beacon will start to operate when the device receives a command to activate its sounder, even if the sound pattern is set to **SP0 - Sounder off**. If the beacon only is required to operate, Sound Pattern SP0 must be selected via the configuration software.

Power Up

The Sita Sounder/Strobe requires approximately one minute on power up to boot up its processor, charge for alarm operation and settle down to normal operation. Do not sound the alarms within the first minute after initializing the loop.

Technical Data

| | | |
|-------------------------------|----------------------|-----------------|
| Dimensions: | Diameter | 97 mm |
| | Depth: inc deep base | 83 mm |
| Operating temperature: | | -10°C to +50°C. |
| Flammability: | | UL94-V2 |
| IP Rating: | | IP 21C |
| Voltage Range (Loop): | | 24 to 42V DC |

System Compatibility: Sita 200 plus V2.30 onwards.
Duonet and Quadnet V1 onwards.

| PRODUCT DESCRIPTION | | | VOLUME LEVEL (dBA) @ 1m anechoic (Dual Tone) | | |
|---------------------|--------------|--------------------------------------|---|--------|------|
| Type | Product Code | Name | Low | Medium | High |
| SNDR | 326 0023 | Sita Sounder / Strobe with Deep Base | 65+ | 84 | 88 |

| | | | LOOP CURRENT (mA) | | | | |
|------|--------------|--------------------------------------|-------------------|-----------|------|--------|-------|
| Type | Product Code | Name | Quiescent | SP0 - Off | Low | Medium | High |
| SNDR | 326 0023 | Sita Sounder / Strobe with Deep Base | 0.18 | 9.00 | 9.50 | 11.50 | 13.50 |

| | | | BATTERY CURRENT (mA) | | | | |
|------|--------------|--------------------------------------|----------------------|-----------|-------|--------|-------|
| Type | Product Code | Name | Quiescent | SP0 - Off | Low | Medium | High |
| SNDR | 326 0023 | Sita Sounder / Strobe with Deep Base | 0.18 | 18.75 | 19.80 | 23.96 | 28.13 |

| | | | DLU RATING | | | |
|------|--------------|--------------------------------------|------------|-----|--------|------|
| Type | Product Code | Name | SP0 - Off | Low | Medium | High |
| SNDR | 326 0023 | Sita Sounder / Strobe with Deep Base | 9 | 9.5 | 11.5 | 13.5 |

N.B. All specified volume and current readings, unless otherwise stated are taken using sound pattern SP3.


Sita OSP versions prior to v4.05A and Quadnet/Duonet OSP versions prior to v2.02A do not include the above DLUs. Manual loop loading and battery backup calculations may therefore be required.

Technical Support

Contact your supplier for technical support on this product.

Due to the complexity and inherent importance of a life risk type system, training on this equipment is essential, and commissioning should only be carried out by competent persons. Fike cannot guarantee the operation of any equipment unless all documented instructions are complied with, without variation. This unit complies with the EMC directive.

Fike's policy is one of continual improvement and the right to change a specification at any time without notice is reserved. Whilst every care has been taken to ensure that the contents of this document are correct at time of publication, Fike shall be under no liability whatsoever in respect of such contents. E&OE.

|  0832 | |
|--|--------------------|
| Fike Safety Technology Ltd Unit 31, Springvale Ind. Est. Torfaen, NP44 5BD 11 DoP-326-0023-R | |
| EN54-3: 2001 +A1: 2002 +A2: 2006, EN54-17: 2005 Sounder Technical Data: See 26-0747 Isolator Technical Data: See 26-1112 326-0023-R Intended for use in the fire detection and fire alarm Systems in and around buildings | |
| Essential characteristics | Performance |
| Nominal activation conditions / Sensitivity, Response delay (response time) and Performance under fire conditions | Pass |
| Operational reliability | Pass |
| Tolerance to supply voltage | Pass |
| Durability of operational reliability and response delay, Temperature resistance | Pass |
| Durability of operational reliability, Vibration resistance | Pass |
| Durability of operational reliability, Humidity resistance | Pass |
| Durability of operational reliability, Corrosion resistance | Pass |
| Durability of operational reliability, Electrical stability | Pass |
| Performance under fire conditions | Pass |
| Durability of operational reliability, Resistance to ingress | Pass |